





You can connect the 6 pin (any output pin may be used) output of the breakout board directly to the TTL input of the laser

After these you can enter a spindle speed between 500 and 10.000 and Mach will control the laser as a spindle. The spindle speed will adjust the laser power.