

## 4. Address list

Content	Register	Function	
AC motor drive parameters	GGnnH	GG means parameter group, nn means parameter number, for example, the address of Pr. 04-01 is 0401H.	
Command write only	2000H	bit 1~0	00B: No function
			01B: Stop
			10B: Run
			11B: JOG + RUN
		bit 3~2	Reserved
		bit 5~4	00B: No function
			01B: FWD
			10B: REV
			11B: Change direction
		bit 7~6	00B: 1 <sup>st</sup> accel. / decel.
			01B: 2 <sup>nd</sup> accel. / decel.
			10B: 3 <sup>rd</sup> accel. / decel.
			11B: 4 <sup>th</sup> accel. / decel.
		bit 11~8	000B: Master speed
			0001B: 1 <sup>st</sup> Stage speed frequency
			0010B: 2 <sup>nd</sup> Stage speed frequency
			0011B: 3 <sup>rd</sup> Stage speed frequency
			0100B: 4 <sup>th</sup> Stage speed frequency
			0101B: 5 <sup>th</sup> Stage speed frequency
			0110B: 6 <sup>th</sup> Stage speed frequency
			0111B: 7 <sup>th</sup> Stage speed frequency
			1000B: 8 <sup>th</sup> Stage speed frequency
			1001B: 9 <sup>th</sup> Stage speed frequency
1010B: 10 <sup>th</sup> Stage speed frequency			
1011B: 11 <sup>th</sup> Stage speed frequency			
1100B: 12 <sup>th</sup> Stage speed frequency			
1101B: 13 <sup>th</sup> Stage speed frequency			
1110B: 14 <sup>th</sup> Stage speed frequency			
1111B: 15 <sup>th</sup> Stage speed frequency			
bit 12	1: Enable bit 06-11 function		
bit 14~13	00B: No function		
	01B: Operated by digital keypad		
	10B: Operated by Pr. 00-21 setting		
	11B: Change operation source		
bit 15	Reserved		
2001H	Frequency command(XXX.XX Hz)		
2002H	bit 0	1: EF (external fault) on	
	bit 1	1: Reset	
	bit 2	1: B.B ON	
	bit 15~3	Reserved	
Status monitor read only	2100H	High byte: Warn code	
		Low Byte: Error code	
	2101H	bit 1~0	AC motor drive operation status
			00B: Drive stops
01B: Drive decelerating			
10B: Drive standby			
11B: Drive operating			
bit 2	1: JOG command		
bit 4~3	Operation direction		
	00B: FWD run		
	01B: From REV run to FWD run		
	10B: REV run		
11B: From FWD run to REV run			