

Used to describe the encoding inside the drive.							
03h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Revision Number (Revision Number)	RO		UDINT	-	0x00000001	-
Upgrade record number used to describe the drive.							
04h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Serial Number (Serial Number)	RO	No	UDINT	-	0x00001419	-
Used to describe a serial number.							

1600	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	RxPDO	-	-	-	-	-	-
Mapping object for setting RxPDO.							
01h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	First mapping object (RxPDO_S11)	RW	RPDO	UDINT	-	0x60400010	-
Mapping object for setting RxPDO1.							
02h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Second mapping object (RxPDO_S12)	RW	RPDO	UDINT	-	0x607A0020	-
Mapping object for setting RxPDO2.							
03h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Third mapping object (RxPDO_S13)	RW	RPDO	UDINT	-	0x60B80010	-
Mapping object for setting RxPDO3.							
04h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Fourth mapping object (RxPDO_S13)	RW	RPDO	UDINT	-	0x60600008	-
Mapping object for setting RxPDO4.							

1701	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	RxPDO	-	-	-	-	-	-
Mapping object for setting RxPDO.							
01h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode

	First mapping object (RxPDO_S11)	RW	RPDO	UDINT	-	0x60400010	-
Mapping object for setting RxPDO1.							
02h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Second mapping object (RxPDO_S12)	RW	RPDO	UDINT	-	0x607A0020	-
Mapping object for setting RxPDO2.							
03h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Third mapping object (RxPDO_S13)	RW	RPDO	UDINT	-	0x60B80010	-
Mapping object for setting RxPDO3.							
04h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	The fourth mapping object (RxPDO_S14)	RW	RPDO	UDINT	-	0x60600008	-
Mapping object for setting RxPDO4.							

1702	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	RxPDO	-	-	-	-	-	-
Mapping object for setting RxPDO.							
01h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	First mapping object (RxPDO_S11)	RW	RPDO	UDINT	-	0x60400010	-
Mapping object for setting RxPDO1.							
02h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Second mapping object (RxPDO_S12)	RW	RPDO	UDINT	-	0x607A0020	-
Mapping object for setting RxPDO2.							
03h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Third mapping object (RxPDO_S13)	RW	RPDO	UDINT	-	0x60FF0020	-
Mapping object for setting RxPDO3.							
04h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	The fourth mapping object (RxPDO_S14)	RW	RPDO	UDINT	-	0x60710008	-
Mapping object for setting RxPDO4.							

05h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	The fifth mapping object (RxPDO_SI5)	RW	RPDO	UDINT	-	0x60600008	-
Mapping object for setting RxPDO5.							
06h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Sixth mapping object (RxPDO_SI6)	RW	RPDO	UDINT	-	0x60B80010	-
Mapping object for setting RxPDO6.							
07h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	The seventh mapping object (RxPDO_SI7)	RW	RPDO	UDINT	-	0x607F0020	-
Mapping object for setting RxPDO7.							

1A00	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	TxPDO	-	-	-	-	-	-
Mapping object for setting TxPDO.							
01h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	First mapping object (TxPDO_SI1)	RW	TPDO	UDINT	-	0x60410010	-
Mapping object for setting TxPDO1.							
02h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Second mapping object (TxPDO_SI2)	RW	TPDO	UDINT	-	0x60640020	-
Mapping object for setting TxPDO2.							
03h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Third mapping object (TxPDO_SI3)	RW	TPDO	UDINT	-	0x60B90010	-
Mapping object for setting TxPDO3.							
04h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	The fourth mapping object (TxPDO_SI4)	RW	TPDO	UDINT	-	0x60BA0020	-
Mapping object for setting TxPDO4.							
05h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	The fifth mapping object	RW	TPDO	UDINT	-	0x60BC0020	-

	(TxPDO_SI5)						
Mapping object for setting TxPDO5.							
06h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Sixth mapping object (TxPDO_SI6)	RW	TPDO	UDINT	-	0x603F0010	-
Mapping object for setting TxPDO6.							
07h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	The seventh mapping object (TxPDO_SI7)	RW	TPDO	UDINT	-	0x60610008	-
Mapping object for setting TxPDO7.							
1B01	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	TxPDO	-	-	-	-	-	-
Mapping object for setting TxPDO.							
01h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	First mapping object (TxPDO_SI1)	RW	TPDO	UDINT	-	0x603F0010	-
Mapping object for setting TxPDO1.							
02h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Second mapping object (TxPDO_SI2)	RW	TPDO	UDINT	-	0x60410010	-
Mapping object for setting TxPDO2.							
03h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Third mapping object (TxPDO_SI3)	RW	TPDO	UDINT	-	0x60640020	-
Mapping object for setting TxPDO3.							
04h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	The fourth mapping object (TxPDO_SI4)	RW	TPDO	UDINT	-	0x60770010	-
Mapping object for setting TxPDO4.							
05h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	The fifth mapping object (TxPDO_SI5)	RW	TPDO	UDINT	-	0x60F40020	-
Mapping object for setting TxPDO5.							
06h	Parameter name	Accessibility	Data	Data	Data display	Default	Correlation

			mapping	structure	range		mode
	Sixth mapping object (TxPDO_SI6)	RW	TPDO	UDINT	-	0x606100108	-
Mapping object for setting TxPDO6.							

1C12	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	RxPDO assign	-	-	-	-	-	-
Used to set up RPDO assignments.							

01h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Index of objects allocated by RPDO (RPDO Index)	RW	No	ARR	-	0x1701	-
The index used to set the allocation object of RPDO.							

1C13	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	TxPDO assign	-	-	-	-	-	-
Used to set TPDO assignments.							

01h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Index of objects assigned by TPDO (TPDO Index)	RW	No	ARR	-	0x0001	-
The index of the allocation object used to set TPDO.							

1C32	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Synchronize management of output parameters (SM output parameter)	-	-	-	-	-	-
Used to describe synchronization management output parameters.							

01h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Synchronization type (Synchronization Type)	RW	No	UINT	-	0x0001	-
Used to set the synchronization type.							

04h	Parameter name	Accessibility	Data mapping	Data structure	Data display range	Default	Correlation mode
	Synchronization Types support (Synchronization Types support)	RO	No	UDINT	-	0x8007	-
Displays the type of distributed clock.							