
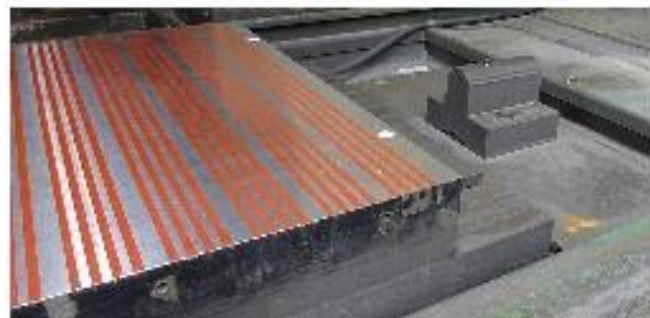


to use LinuxCNC with a Motenc interface for control of a flat grinding machine actually we use macros in MDI with specific variables defined in file

```
motenc.var
4190 3.275000
4191 0.000000
4192 0.000000
4193 0.000000
4194 68.045000
4195 0.005000
4196 68.180000
4197 0.030000
4198 68.500000
4199 69.000000
4200 150.000000
4201 -100.000000
4202 -300.000000
4203 25.000000
4204 15.000000
4205 3600.000000
4206 0.050000
4207 200.000000
4208 400.000000
4209 30000.000000
4210 -100.000000
| | | | | | | |
5161 0.000000
5162 0.000000
5163 0.000000
| | | | | | | |
5388 0.000000
5389 0.000000
5390 0.000000
```

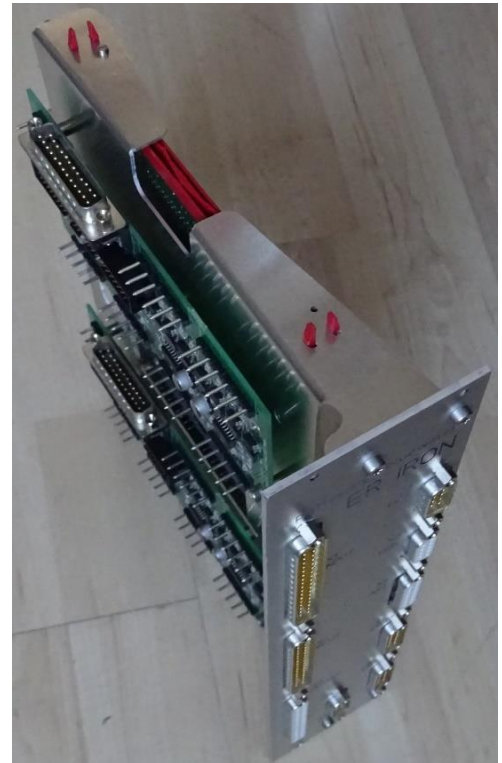

can we at linuxcnc start up load this specific variables in some QtVCP Widget to display and to vary and then automatically to restore them?