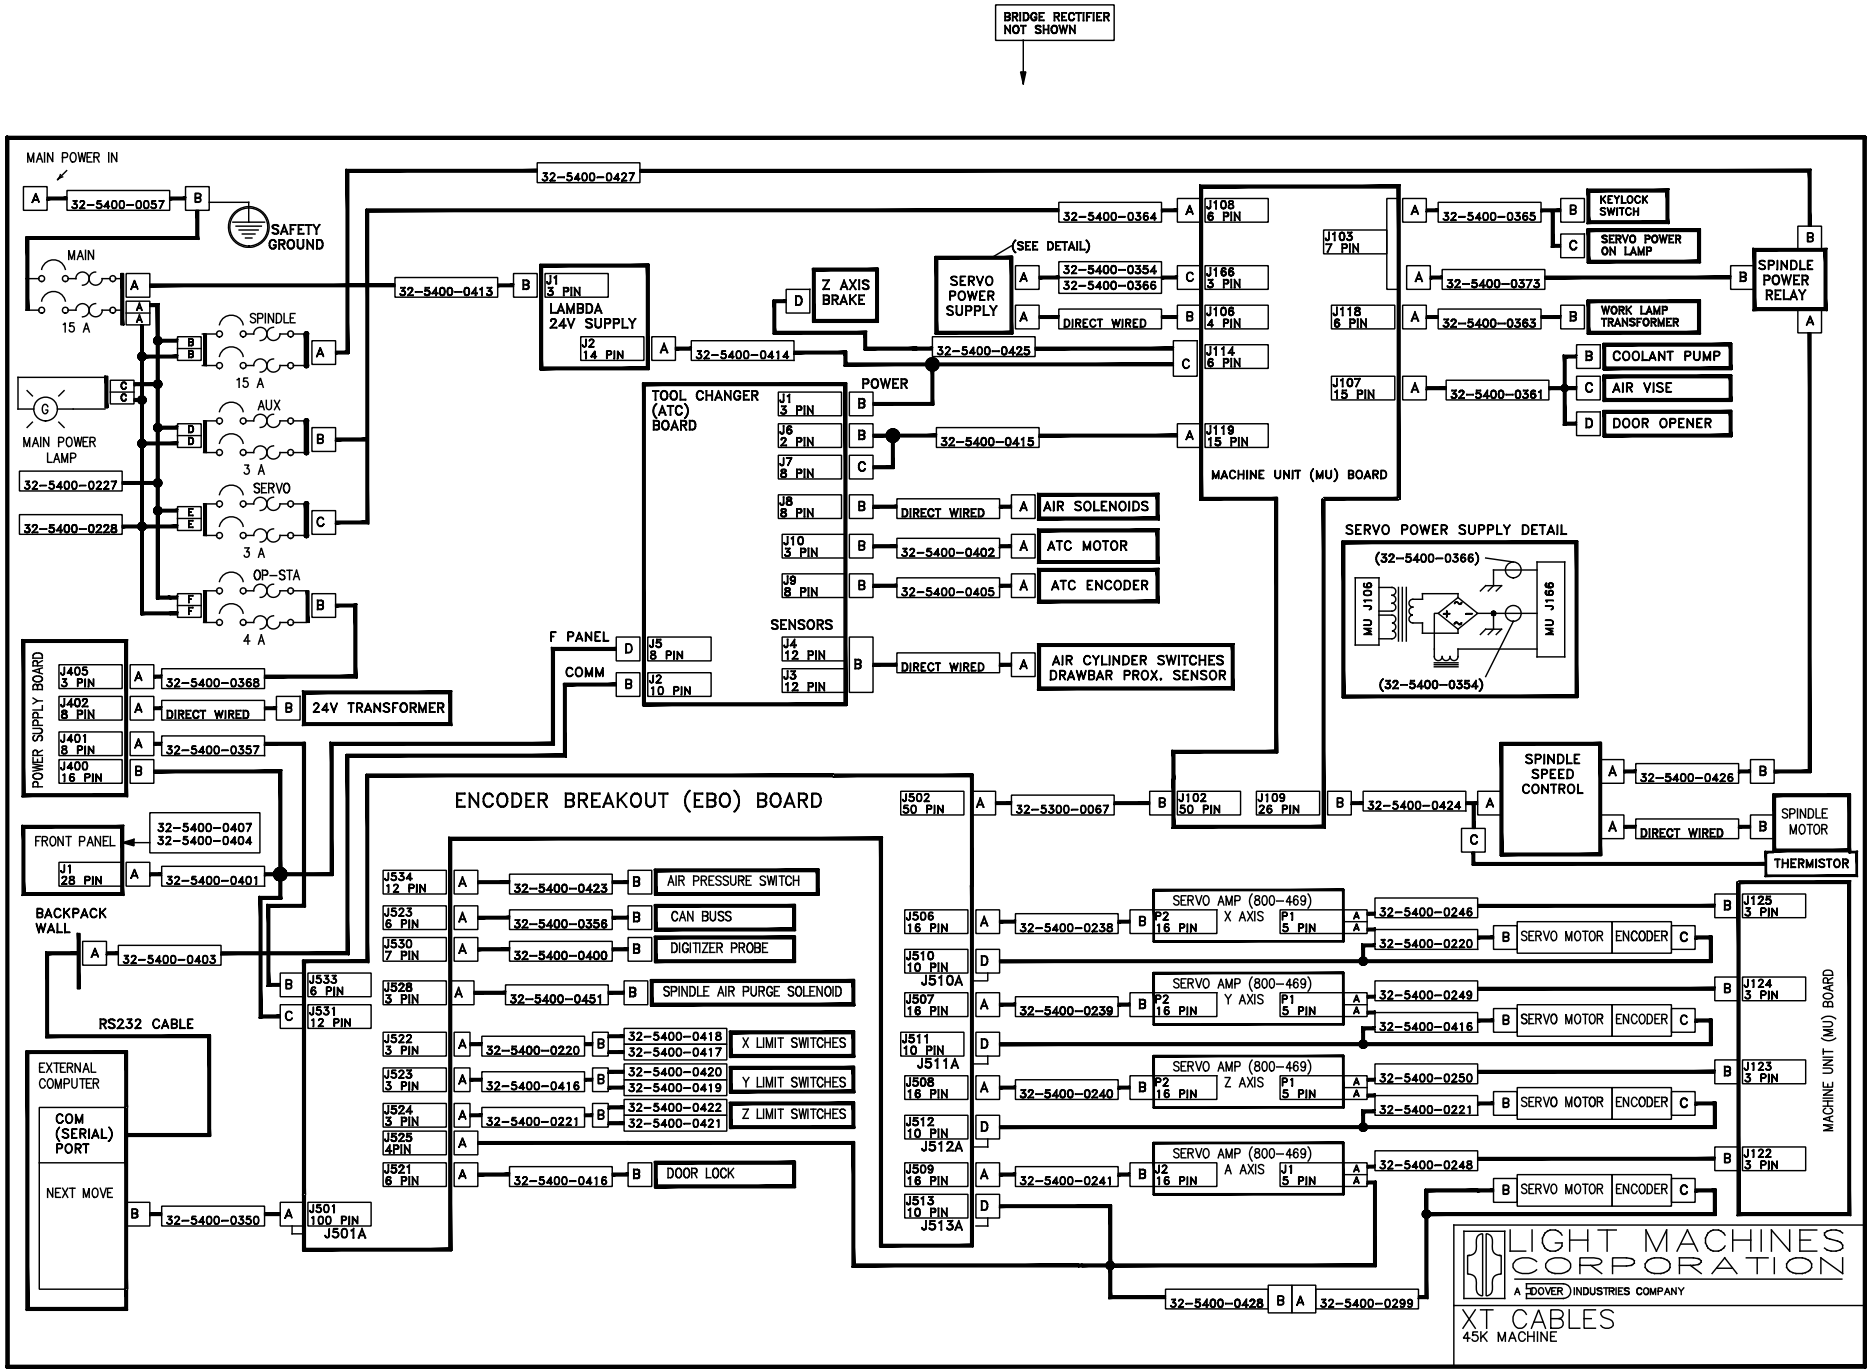
BRIDGE RECTIFIER NOT SHOWN
MAIN POWER IN
32-5400-0057
SAFETY GROUND
MAIN
15 A
SPINDLE
15 A
AUX
3 A
SERVO
3 A
OP-STA
4 A
MAIN POWER LAMP
32-5400-0227
32-5400-0228
32-5400-0427
32-5400-0413
J1 3 PIN
LAMBDA 24V SUPPLY
J2 14 PIN
32-5400-0414
Z AXIS BRAKE
SERVO POWER SUPPLY
(SEE DETAIL)
32-5400-0354
32-5400-0366
DIRECT WIRED
32-5400-0425
32-5400-0364
J108 6 PIN
J166 3 PIN
J106 4 PIN
J114 6 PIN
J119 15 PIN
J103 7 PIN
J118 6 PIN
J107 15 PIN
MACHINE UNIT (MU) BOARD
32-5400-0365
KEYLOCK SWITCH
SERVO POWER ON LAMP
32-5400-0373
SPINDLE POWER RELAY
32-5400-0363
WORK LAMP TRANSFORMER
32-5400-0361
COOLANT PUMP
AIR VISE
DOOR OPENER
TOOL CHANGER (ATC) BOARD
J1 3 PIN
J6 2 PIN
J7 8 PIN
J8 8 PIN
J10 3 PIN
J9 8 PIN
POWER
32-5400-0415
DIRECT WIRED
AIR SOLENOIDS
32-5400-0402
ATC MOTOR
32-5400-0405
ATC ENCODER
SENSORS
J4 12 PIN
J3 12 PIN
AIR CYLINDER SWITCHES DRAWBAR PROX. SENSOR
F PANEL
J5 8 PIN
COMM
J2 10 PIN
SERVO POWER SUPPLY DETAIL
(32-5400-0366)
MU J106
MU J166
(32-5400-0354)
POWER SUPPLY BOARD
J405 3 PIN
32-5400-0368
J402 8 PIN
DIRECT WIRED
24V TRANSFORMER
J401 8 PIN
32-5400-0357
J400 16 PIN
ENCODER BREAKOUT (EBO) BOARD
J502 50 PIN
32-5300-0067
J102 50 PIN
J109 26 PIN
32-5400-0424
SPINDLE SPEED CONTROL
32-5400-0426
DIRECT WIRED
SPINDLE MOTOR
THERMISTOR
FRONT PANEL
32-5400-0407
32-5400-0404
J1 28 PIN
32-5400-0401
BACKPACK WALL
32-5400-0403
RS232 CABLE
EXTERNAL COMPUTER
COM (SERIAL) PORT
NEXT MOVE
32-5400-0350
J501 100 PIN
J501A
J533 6 PIN
J531 12 PIN
J534 12 PIN
32-5400-0423
AIR PRESSURE SWITCH
J523 6 PIN
32-5400-0356
CAN BUSS
J530 7 PIN
32-5400-0400
DIGITIZER PROBE
J528 3 PIN
32-5400-0451
SPINDLE AIR PURGE SOLENOID
J522 3 PIN
32-5400-0220
32-5400-0418
32-5400-0417
X LIMIT SWITCHES
J523 3 PIN
32-5400-0416
32-5400-0420
32-5400-0419
Y LIMIT SWITCHES
J524 3 PIN
32-5400-0221
32-5400-0422
32-5400-0421
Z LIMIT SWITCHES
J525 4PIN
J521 6 PIN
32-5400-0416
DOOR LOCK
J506 16 PIN
J510 10 PIN
J510A
J507 16 PIN
J511 10 PIN
J511A
J508 16 PIN
J512 10 PIN
J512A
J509 16 PIN
J513 10 PIN
J513A
32-5400-0238
32-5400-0239
32-5400-0240
32-5400-0241
SERVO AMP (800-469)
X AXIS
Y AXIS
Z AXIS
A AXIS
P2 16 PIN
P1 5 PIN
J2 16 PIN
J1 5 PIN
32-5400-0246
32-5400-0220
32-5400-0249
32-5400-0416
32-5400-0250
32-5400-0221
32-5400-0248
SERVO MOTOR
ENCODER
J125 3 PIN
J124 3 PIN
J123 3 PIN
J122 3 PIN
MACHINE UNIT (MU) BOARD
32-5400-0428
32-5400-0299
LIGHT MACHINES CORPORATION
A DOVER INDUSTRIES COMPANY
XT CABLES
45K MACHINE